# Assembly instructions

## Classic all-terrain Roulalinge

Assembly takes about 10 minutes and can be done by one person.

You will need the following tools :


- 10mm spanner
- 4mm hex key (Allen key)
- Cutting pliers or scissors
- Two 17mm spanners

If you need any help, contact us: contact@pleinairsolutions.fr – +33 6 35 97 84 36 – www.pleinairsolutions.fr

### Step 1 :

Take the Roulalinge out of the box, cut the cable ties and take out the accessory bags. Then fit the wheels to the lower frame:

1 – Insert the M10 x 120 screws and slide a black spacer onto each one

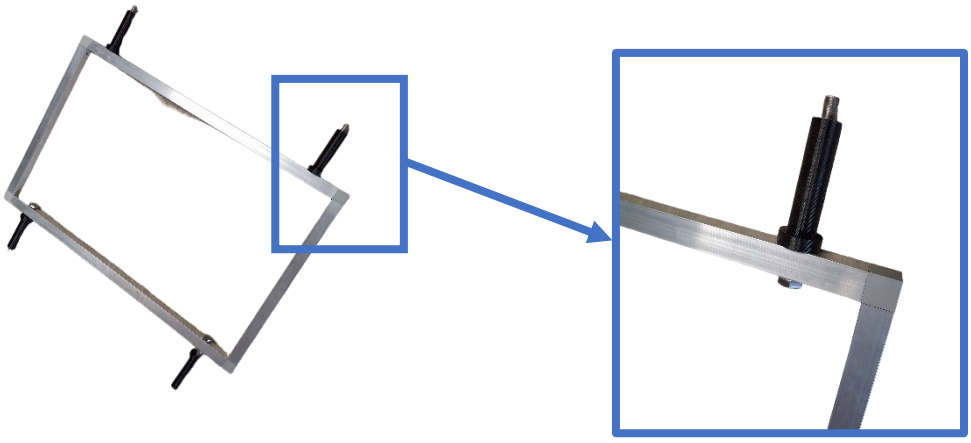

2 – Fit the wheel, add a washer and the nut, then tighten



## Step 2 :

Screw the 4 uprights onto the rolling base with 4 screws and 4 lock nuts. Each upright goes inside the frame, in each corner. The screw head goes on the outside and the nut on the inside. Do not fully tighten at this stage.

End of step 2:




## Step 3 :

Fit the upper frame with 4 screws and 4 nuts. Screw heads go on the outside and nuts on the inside.

Tip: insert the 4 screws first, then the nuts.

Fit the frame so that the Roulalinge logo is the right way up (turn the handle side round if needed).

Tighten the nuts

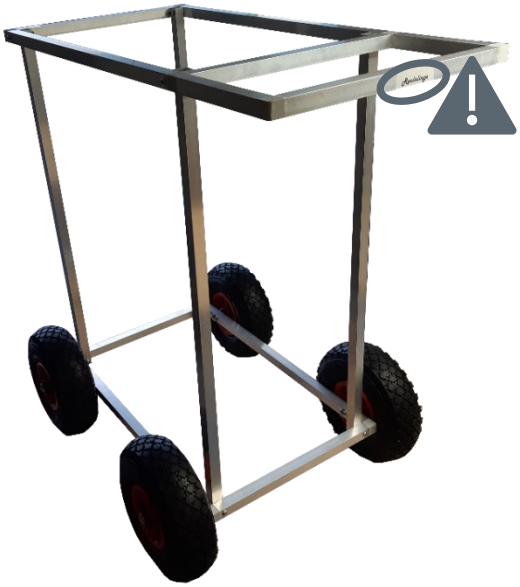

## Step 4 :

Fully tighten the nuts on the lower frame.

## Step 5 :

Fit the caps on top of the 4 uprights:

