Assembly instructions

Folding all-terrain Roulalinge

Fitting the wheels takes less than 10 minutes.

You will need the following tools :


- Two 17mm spanners
- Cutting pliers or scissors


If you need any help, contact us: contact@pleinairsolutions.fr – +33 6 35 97 84 36 – www.pleinairsolutions.fr

Step 1 :


Take the longest screws and the longest black spacers, with two nuts and washers. They go on the brake side (handle side of the Roulalinge):



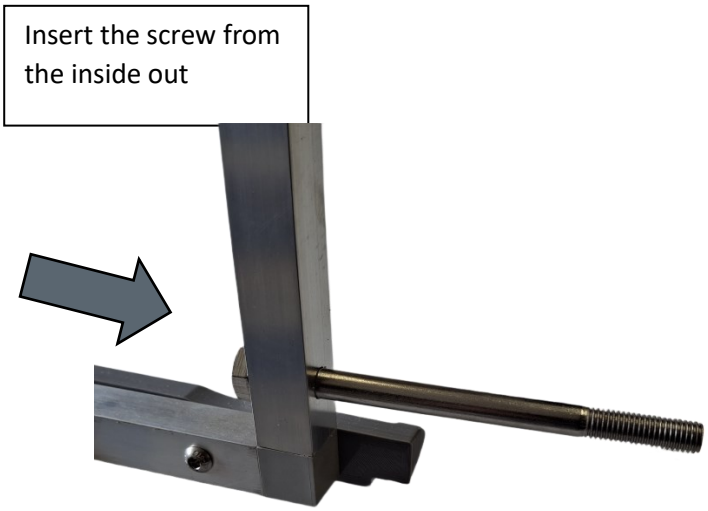

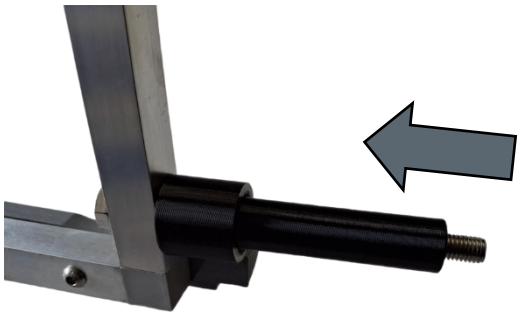

Slide the spacer onto the screw

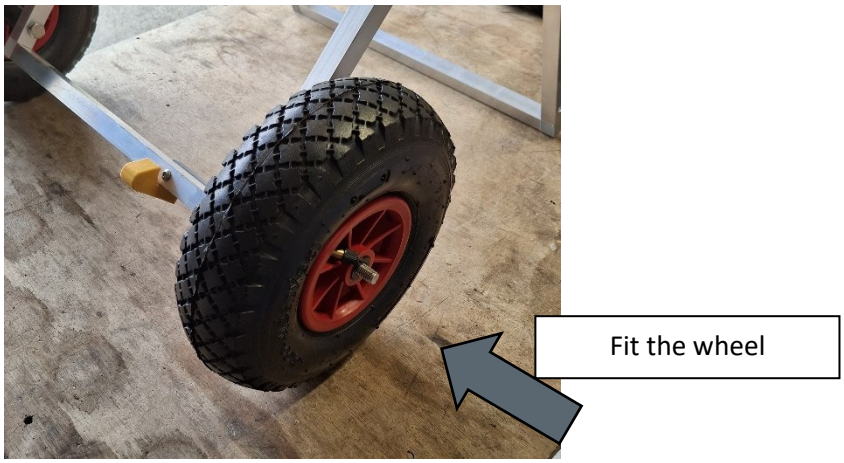



Repeat on both sides

Step 2 :

Repeat with the shortest screws and spacers at the front of the Roulalinge (both sides):







