Assembly instructions

Flexilinge

Assembling the Flexilinge takes less than 10 minutes.

You will need the following tools:

- 10mm spanner (open-ended or combination)
- 4mm hex key (Allen key)

If you need any help, contact us: contact@pleinairsolutions.fr – +33 6 35 97 84 36 – www.pleinairsolutions.fr


Step 1:

Take the Flexilinge out of its box and lay it flat on the floor:



Step 2:


Check the contents of the accessory bag:

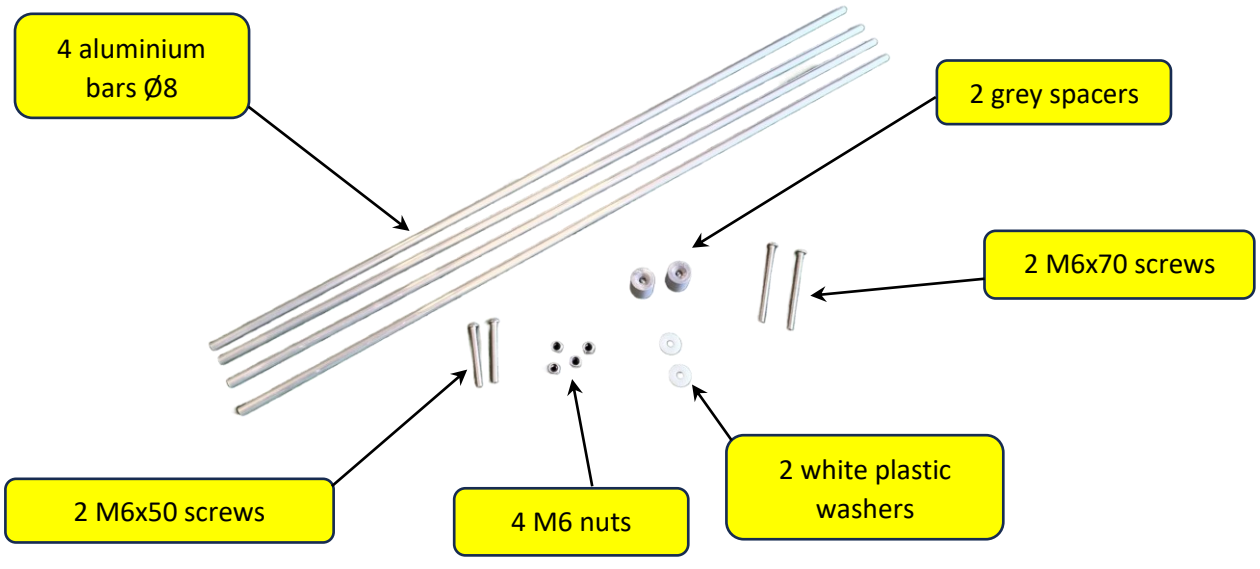


Step 3:

Pre-assemble the first frame:

1 Tilt the frame

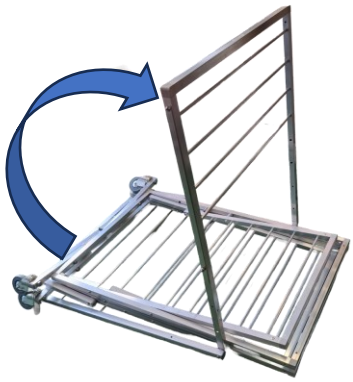


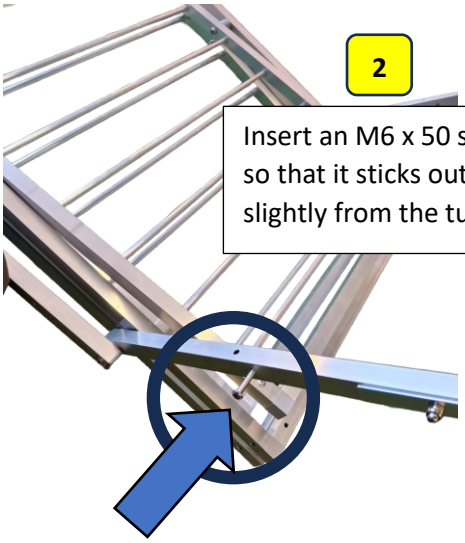

2 Insert an M6 x 50 screw so that it sticks out slightly from the tube

3 Hook a plastic washer onto the protruding screw



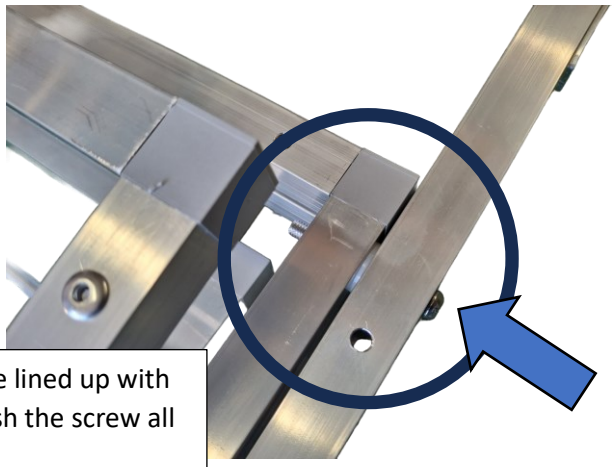


4 Keep tilting; when you are lined up with the hole in the frame, push the screw all the way through



5 On the other side, insert an M6 x 70 screw through both walls of the first tube without letting it stick out

Fit a grey spacer and push the screw all the way through the spacer and the hole in the frame

6

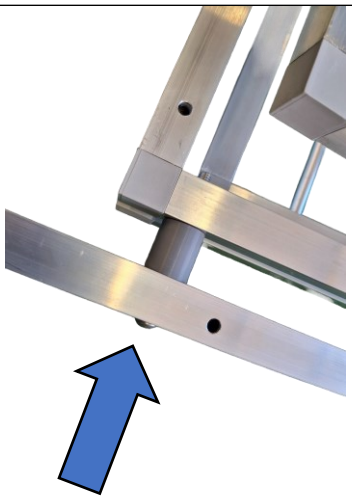

Step 4:

Turn the Flexilinge over and repeat step 3 on the other frame


Step 5:

Stand the Flexilinge up on its wheels and open out the frames:




Step 6:


Finish assembling the frames

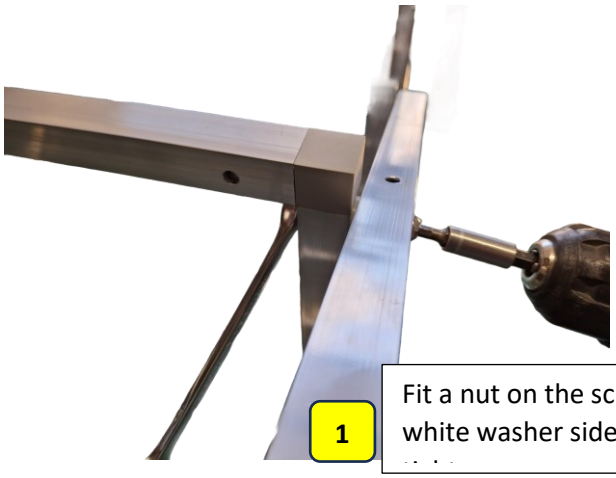

1 Fit a nut on the screw on the white washer side and

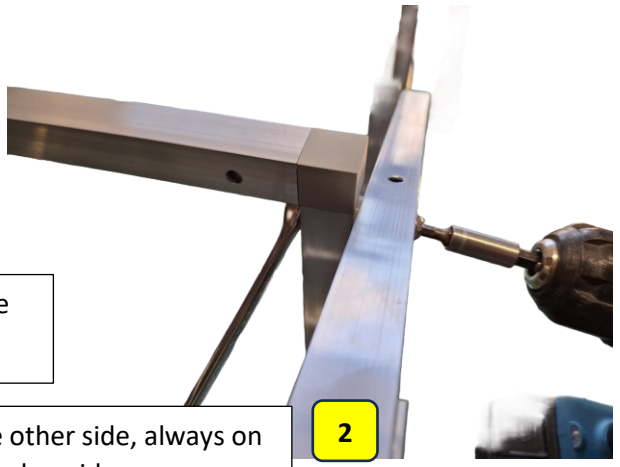

2 Same on the other side, always on the white washer side

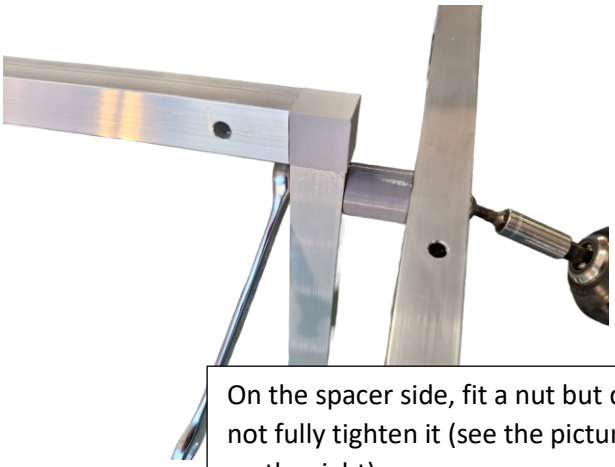

3 On the spacer side, fit a nut but do not fully tighten it (see the picture on the right):




For the smoothest folding, do not overtighten: the end of the screw only needs to be flush with the nut




4 Same for the other screw on the spacer side:


Step 7:


Fit the aluminium bars:

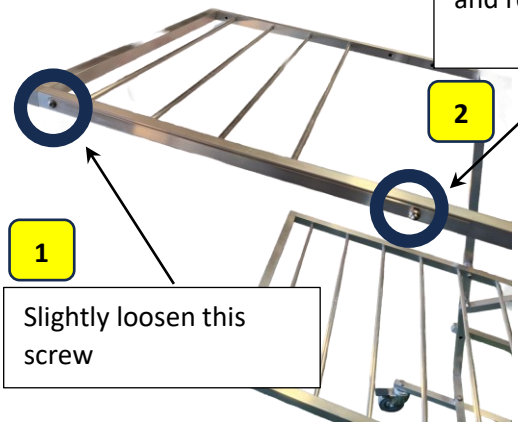




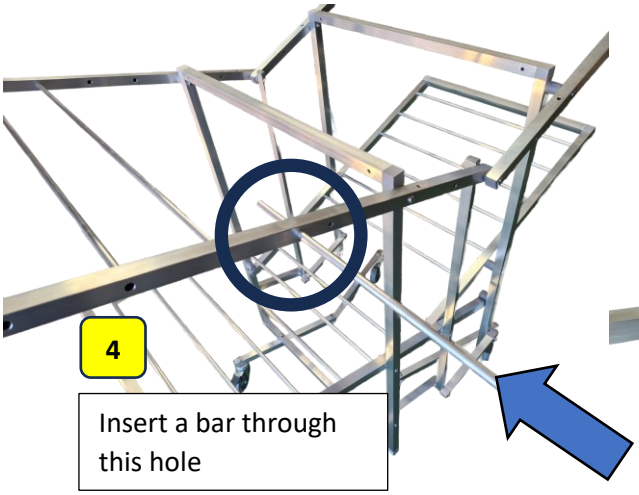


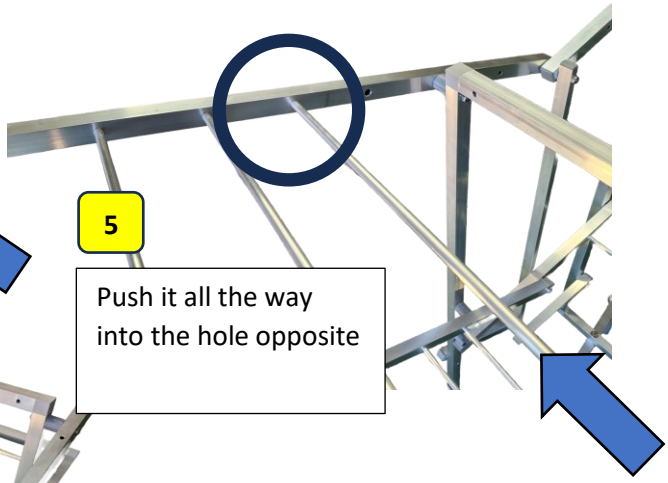

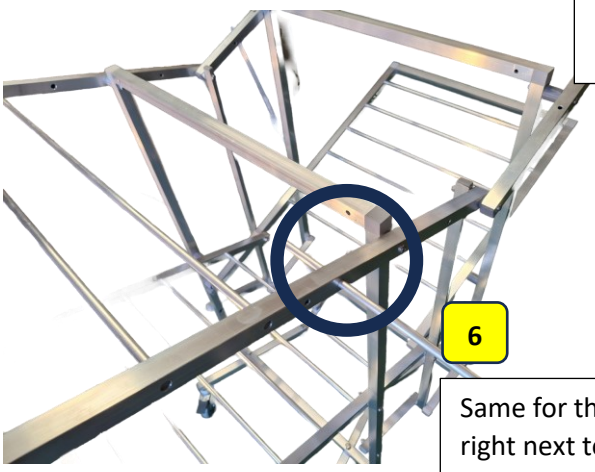

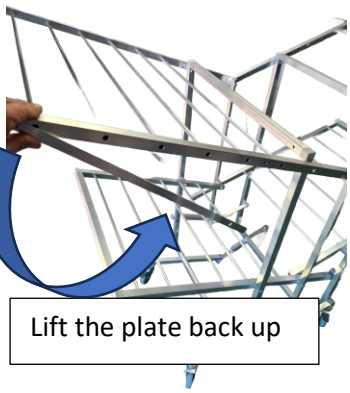

7 Lift the plate back up

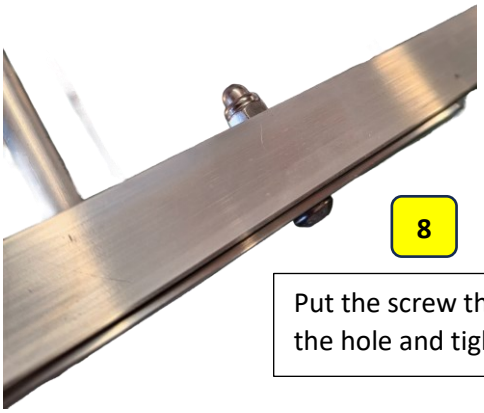

8 Put the screw through the hole and tighten



9 Don’t forget to go back and tighten the top one

Step 8:

Repeat the same steps for the other frame